

Table of contents

1. For your safety	p.2-6
● Appropriate response	p.3
● Handling guideline	p.3
● Prohibited uses	p.4-5
● Instruction of use	p.6
● Caution	p.6
2. Contents and assembling	p. 7-8
3. Connect the Grand Pianist special AC adapter	p.9
4. Description on the back side of Grand Pianist	p.9
5. Power ON/OFF	p.10
Automatic power off feature	p.10
6. Navigation panel description	p.10
7. Enjoy the Grand Pianist	p.11-12
● Listen to automatic playing	p.11
Repeat feature	p.12
Pause feature	p.12
● Enjoy performing	p.12
8. Connect to external audio equipment	p.13
9. Connect to external speaker	p.14
10. About special cartridge (sold separately)	p.15
11. List of songs included	p.15-19
12. Other	p.20-22
● Adjusting contrasting density on LCD screen on navigation panel	p.20
● If you think there is a trouble....	p.20
● Specifications	p.21
● Security and after services	p.22

Contents and Assembling

Contents:

Grand Pianist body . . . . . 1	Chair . . . . . 1
Roof for the Grand Pianist body . . . . . 1	Grand Pianist keyboard cover . . . . . 1
Piano legs . . . . . 3	Grand Pianist special AC adapter . . . . . 1
Cover for the piano leg . . . . . 1 (do not place the cover before connecting the special AC adapter for Grand Piano)	Grand Pianist special audio connecting cable . 1
Trey for piano legs . . . . . 3	Driver . . . . . 1
Pedal . . . . . 1	Operation manual . . . . . 1

Page8

1. Attach the roof to the body of Grand Pianist and place it up-side-down.
2. Use the driver included to attach legs and the pedal to the body. Be sure to tighten with screws. \*Do not place the cover before placing the special AC adapter code. See page 9.
3. Use the stick to keep the roof open.
4. Set the music desk.
5. Place the tray for piano legs.

Page9 (Top)

Connecting Grand Pianist special AC adapter

1. Make sure the main power is off. Insert the special AC adapter into a slot on body.
2. Place the code in the piano leg.
3. Place the cover for the leg.
4. Insert the other end of the adapter into wall socket.

Caution: Do not insert any other code into the Grand Pianist.

Make sure the power has been set off.

Page9 (Bottom)

Description on the back side of Grand Pianist

- DC IN 9V --- special AC adapter slot (insert the special adapter)
- INPUT --- Plug slot (use when you connect to external music equipment such as music player)
- OUTPUT --- Plug slot (use when you connect to external speaker)
- Do not insert head phone or ear phone plug.
- MAIN POWER --- Main power switch

### Power ON/OFF

#### Turn on the power

1. Turn on the switch located on the back side of Grand Pianist body.  
\*Liquid-crystal display on navigation panel will start and menu mode display will appear.  
(When LED light is green, it is on startup status.)

#### Turn off the power

1. Push the power button (ON/STAND-BY) on navigation panel.  
\* Ending display will show on the liquid-crystal display, then, display will disappear.  
(When LED light is red and blinking, it is on stand-by mode.)
2. If you are not using for a while, turn off the main power on the back side of the body.

#### Automatic power off feature

If you do not use it for over 3 minutes, it will automatically set to stand-by mode.

Note: main power is still on.

### Description of navigation panel

1. Slide open the navigation panel located top part of the Grand Pianist body.

### Enjoy the Grand Pianist Listen to automatic playing

1. Insert the special AC adapter to the slot on Grand Pianist body and to the power socket.
2. Turn on the main power.
3. When menu mode appears on the display, press ENTER.
4. Use the arrow buttons to choose the category of music.  
\* see page 15~19 for the list of music included.
5. Chose the name of song you wish to listen and press ENTER.  
\*Adjust the volume of music using up/down arrow buttons.  
\*Use the arrow buttons to change songs within same category.  
\*If you wish to change the category of music, press CANCEL, then, chose other category and song.  
\* 1minutes after finished playing, menu mode display will appear and then automatic turn off feature will operate.
6. Press CANCEL to stop the automatic playing mode.
7. Press ON/STAND-BY to end. LED red light will blink and set it to stand-by mode.  
\*To re-start, press ON/STAND-BY.

Page12 (Top)

### Repeat feature

- ① Repeat the selected song: press MODE button once while selected song is playing. The selected song will be repeated 10 times.
- ② Repeat songs in selected category in order: press MODE button twice while song in selected category is playing. All the songs in selected category will repeat twice.
- ③ Randomly repeat songs in selected category: press MODE button three times while song in selected category is playing. All the songs in selected category will randomly played once.

### Pause feature

Press ENTER while song is playing to pause. Press ENTER again to re-start.

\*If you let it pause for 10 minutes, it will automatically re-start.

Page12 (Bottom)

### Enjoy performing

Even though it is a small keyboard, you can play music on Grand Pianist.

1. Insert the special AC adapter to the slot on Grand Pianist body and to the power socket.
2. Turn on the main power.
3. Use arrow key to choose self playing mode (手動演奏) and press ENTER. \*Do not press too hard. \*5 minutes after finished playing, menu mode display will appear and then automatic turn off feature will operate.
4. To stop self playing mode, press CANCEL.
5. Press ON/STAND-BY to end. LED red light will blink and set it to stand-by mode.  
\*To re-start, press ON/STAND-BY.

Page13

### Connect to external audio equipment

You can connect CD player or other audio equipment to Grand Pianist with special audio connecting cable.

1. Insert the special audio connecting cable into the INPUT slot on the back side of Grand Pianist body.
2. Insert the other end into the external equipment you wish to connect.
3. Turn on the main power.
4. Use arrow button to choose external input (外部入力) and press ENTER to start playing.
5. Press CANCEL to stop.

\*The volume on the external equipment is very small, keyboard will not operate.

\*Make sure to keep the volume low when connecting the cable.

\*Adjust volume on the external equipment.

\*30 minutes after finished playing, menu mode display will appear and then automatic

turn off feature will operate.

6. Press ON/STAND-BY to end. LED red light will blink and set it to stand-by mode.  
\*To re-start, press ON/STAND-BY.

Page14

### Connect to external speaker

You can connect external speaker to Grand Pianist with special audio connecting cable.

1. Insert the special audio connecting cable into the OUTPUT slot on the back side of Grand Pianist body.
2. Insert the other end into the INPUT slot of external speaker. \* Be sure to check the operation manual on external speaker you wish to connect to.
3. Turn on the main power.
4. Use arrow key to choose category and song on automatic playing mode then press ENTER to start playing.
5. Press CANCEL to stop.  
\*Make sure to keep the volume low when connecting the cable.  
\*You can adjust volume both on Grand Pianist and an external speaker.
6. Press ON/STAND-BY to end. LED red light will blink and set it to stand-by mode.  
\*To re-start, press ON/STAND-BY.

Page15~19

### List of songs included

#### Category A: Classical music

No.	Name of song	Composer
A-01	Träumerei	Schumann
A-02	Quasi una Fantasia	Beethoven
A-03	Rêverie	Debussy
A-04	Piano Concertos No.1	Tchaikovsky
A-05	Arabesques No.1	Debussy
A-06	PRELUDES 24 Op.28 No.15 Asdur Sostenuto	Chopin
A-07	Polonaise in A flat major	Chopin
A-08	Symphony No. 40 in G minor	Mozart
A-09	Eine kleine Nachtmusik	Mozart
A-10	Piano Concerto in A minor	Grieg
A-11	The Planet · Jupiter, the Bringer of Jollity	Gustav Holst
A-12	Le Cygne	Saint-Saëns
A-13	Hungarian Dances	Brahms
A-14	Liebesträume (Dream of love)	Liszt

A-15	Piano Sonata No. 15 first movement	Mozart
A-16	The Blue Danube	Strauss
A-17	Vltava	Smetana
A-18	Siciliano	Bach
A-19	Grande Valse Brillante	Chopin
A-20	Je te veux	Satie
A-21	Nocturnes Op. 9 No.2	Chopin
A-22	Peer Gynt – Morning Mood	Grieg
A-23	La prière d'une vierge	Baranowska
A-24	The four seasons – Spring first movement	vivaldi
A-25	Für Elise	Beethoven
A-26	Light Cavalry	Suppé
A-27	Étude Op.10 No.3	Chopin
A-28	la Campanella	Liszt
A-29	L'Arlésienne	Bizet
A-30	Kanon	Pachelbel
A-31	Tannhäuser	Wagner
A-32	Aida	Verdi,
A-33	Air on the G String	Bach
A-34	Pictures at an Exhibition -Promenade	Mussorgsky
A-35	The Nutcracker	Tchaikovsky
A-36	Hungarian Rhapsodies	Liszt
A-37	Wedding March	Mendelssohn
A-38	Happy Birthday	
A-39	Silent Night	Gruber
A-40	Auld Lang Syne	Scotland folk song

**Category B: Jazz**

B-01	Take Five
B-02	Misty
B-03	The Girl from Ipanema
B-04	Waltz for Debby
B-05	My funny valentine
B-06	Fly me to the moon
B-07	Moonlight serenade
B-08	My favorite things
B-09	You`d be so nice to come home to

B-10	The Shadow of Your Smile
B-11	Rhapsody in blue
B-12	On the day of Carnival
B-13	Wedding March

**Category C: Mood music**

C-01	Killing Me Softly
C-02	Les Parapluies de Cherbourg
C-03	Longing/Love
C-04	Scarborough Fair
C-05	L'AMOUR EST BLUE
C-06	Ballade pur adeline

**Category D: Theme songs**

D-01	Merry Christmas Mr. Lawrence
D-02	Plein soleil
D-03	Entertainer
D-04	Melody Fair
D-05	Sound of silence
D-06	"Saisho kara ima made" · Korean song
D-07	"Kizudareke no tenshi" – Japanese song
D-08	God father

**Category E: Japanese Music**

E-01	"22sai no wakare" – Kaguya hime
E-02	RYDEEN
E-03	"iichi tabidachi" – Momoe Yamaguchi
E-04	"kisetsu no nakade"
E-05	"hatsukoi"
E-06	"ano hi ni kaeritai"
E-07	"oribia o kikinagara"
E-08	"kokoro no tabi"
E-09	"fuyu ga kuru maeni"
E-10	"itoshi no eri"
E-11	"Johnny he no dengon"
E-12	"nemurenu yoru"
E-13	"kokoromoyou"-Yosui Inoue

E-14	“ai ha kagerou”
E-15	“bannri no kawa”
E-16	“genki o dashite”
E-17	DOWN TOWN

**Category F: Western music**

F-01	Have You Never Been Mellow
F-02	I'VE NEVER BEEN TO ME
F-03	Hotel California
F-04	Hard to Say I'm Sorry
F-05	Stranger
F-06	Yesterday
F-07	Yesterday once more
F-08	Moonlight shadow
F-09	What a Fool Believes
F-10	Cant's Take My Eyes Off You
F-11	Tout Tout Pour Ma Cherie
F-12	Irresistiblement
F-13	It Never Rains In Southern California
F-14	Daydream Believer
F-15	Arthur's Theme
F-16	Let it be

Additional Notes:

Page 20

To adjust the contrast of the LCD screen, turn the main switch on, wait for the screen that has the word “MENU” printed in English to come up on the LCD screen, and then use the “UP-DOWN” buttons on the control panel (to the right of the “CANCEL” button) to make adjustments.

The provided Japanese AC adapter is universal so no converter or adapter is needed for the US. Simply plug it into a US wall socket and you are all set.